


REMOVAL AND INSTALLATION

Battery Tray — Auxiliary

1. Remove the auxiliary battery. For additional information, refer to Auxiliary Battery in this section.
2. Remove the air cleaner assembly. For additional information, refer to Section 303-12.
3. Remove the bolts and remove the battery tray.

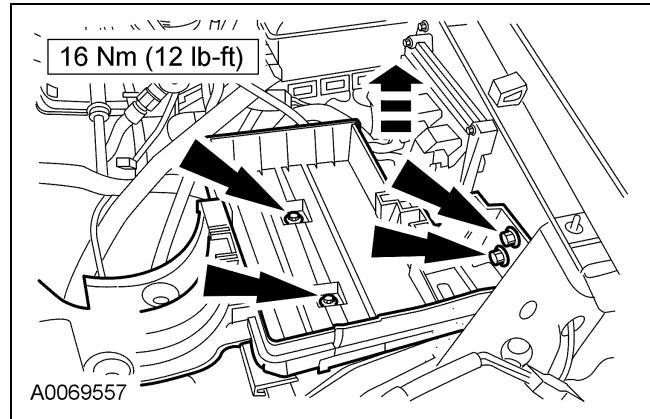

4. To install, reverse the removal procedure.