


REMOVAL AND INSTALLATION

Cooling Fan Stator — 6.0L Diesel

Removal and Installation

1. Remove the cooling fan. For additional information, refer to Cooling Fan — 6.0L Diesel in this section.
2. **NOTE:** Early build will have five bolts. Late build will have four bolts.
Remove the bolts and cooling fan stator.

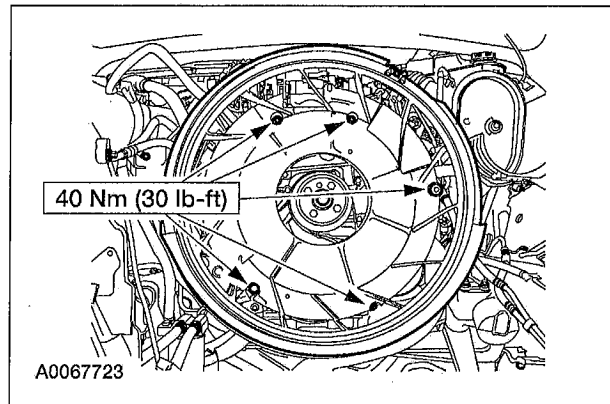

3. To install, reverse the removal procedure.