

SECTION 303-04D Fuel Charging and Controls — Turbocharger

CONTENTS

PAGE


Turbocharger Pedestal	303-04D-2
-----------------------------	-----------

Turbocharger Pedestal

Removal and Installation

1. Remove the turbocharger. For additional information, refer to Turbocharger in this section.
2. **NOTE:**
Late production shown, early production similar.

Remove the bolts and the turbocharger pedestal.

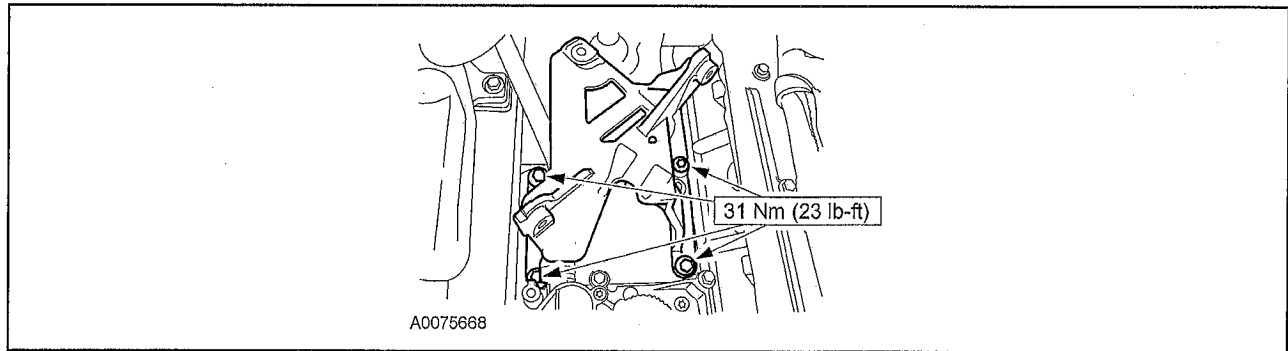

3. To install, reverse the removal procedure.