

## 2002 Ford F-250 SUPER DUTY PICKUP

Submodel: | Engine Type: V8 | Liters: 7.3

Fuel Delivery: FI | Fuel: DIESEL


SECTION 308-07A: Four-Wheel Drive Systems      2002 F-Super Duty 250-550/Excursion Workshop Manual  
REMOVAL AND INSTALLATION      [Procedure revision date: 09/01/2004](#)

### Four-Wheel Drive (4WD) Control Module


#### Removal and Installation

**CAUTION:** Prior to removal of the four-wheel drive (4WD) control module, it is necessary to upload module configuration information to a diagnostic tool. This information needs to be downloaded into the new module once installed. For additional information, refer to Section 418-01.

1. Disconnect the battery ground cable. For additional information, refer to Section 414-01.
2. Open and lower the glove box compartment.
3. Disconnect the connectors from the 4WD module.

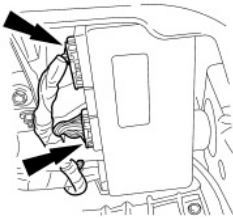

4. Remove two nuts, one bolt and the 4WD module.

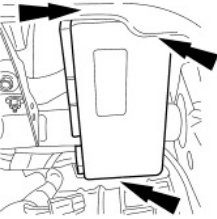

5. To install, reverse the removal procedure.