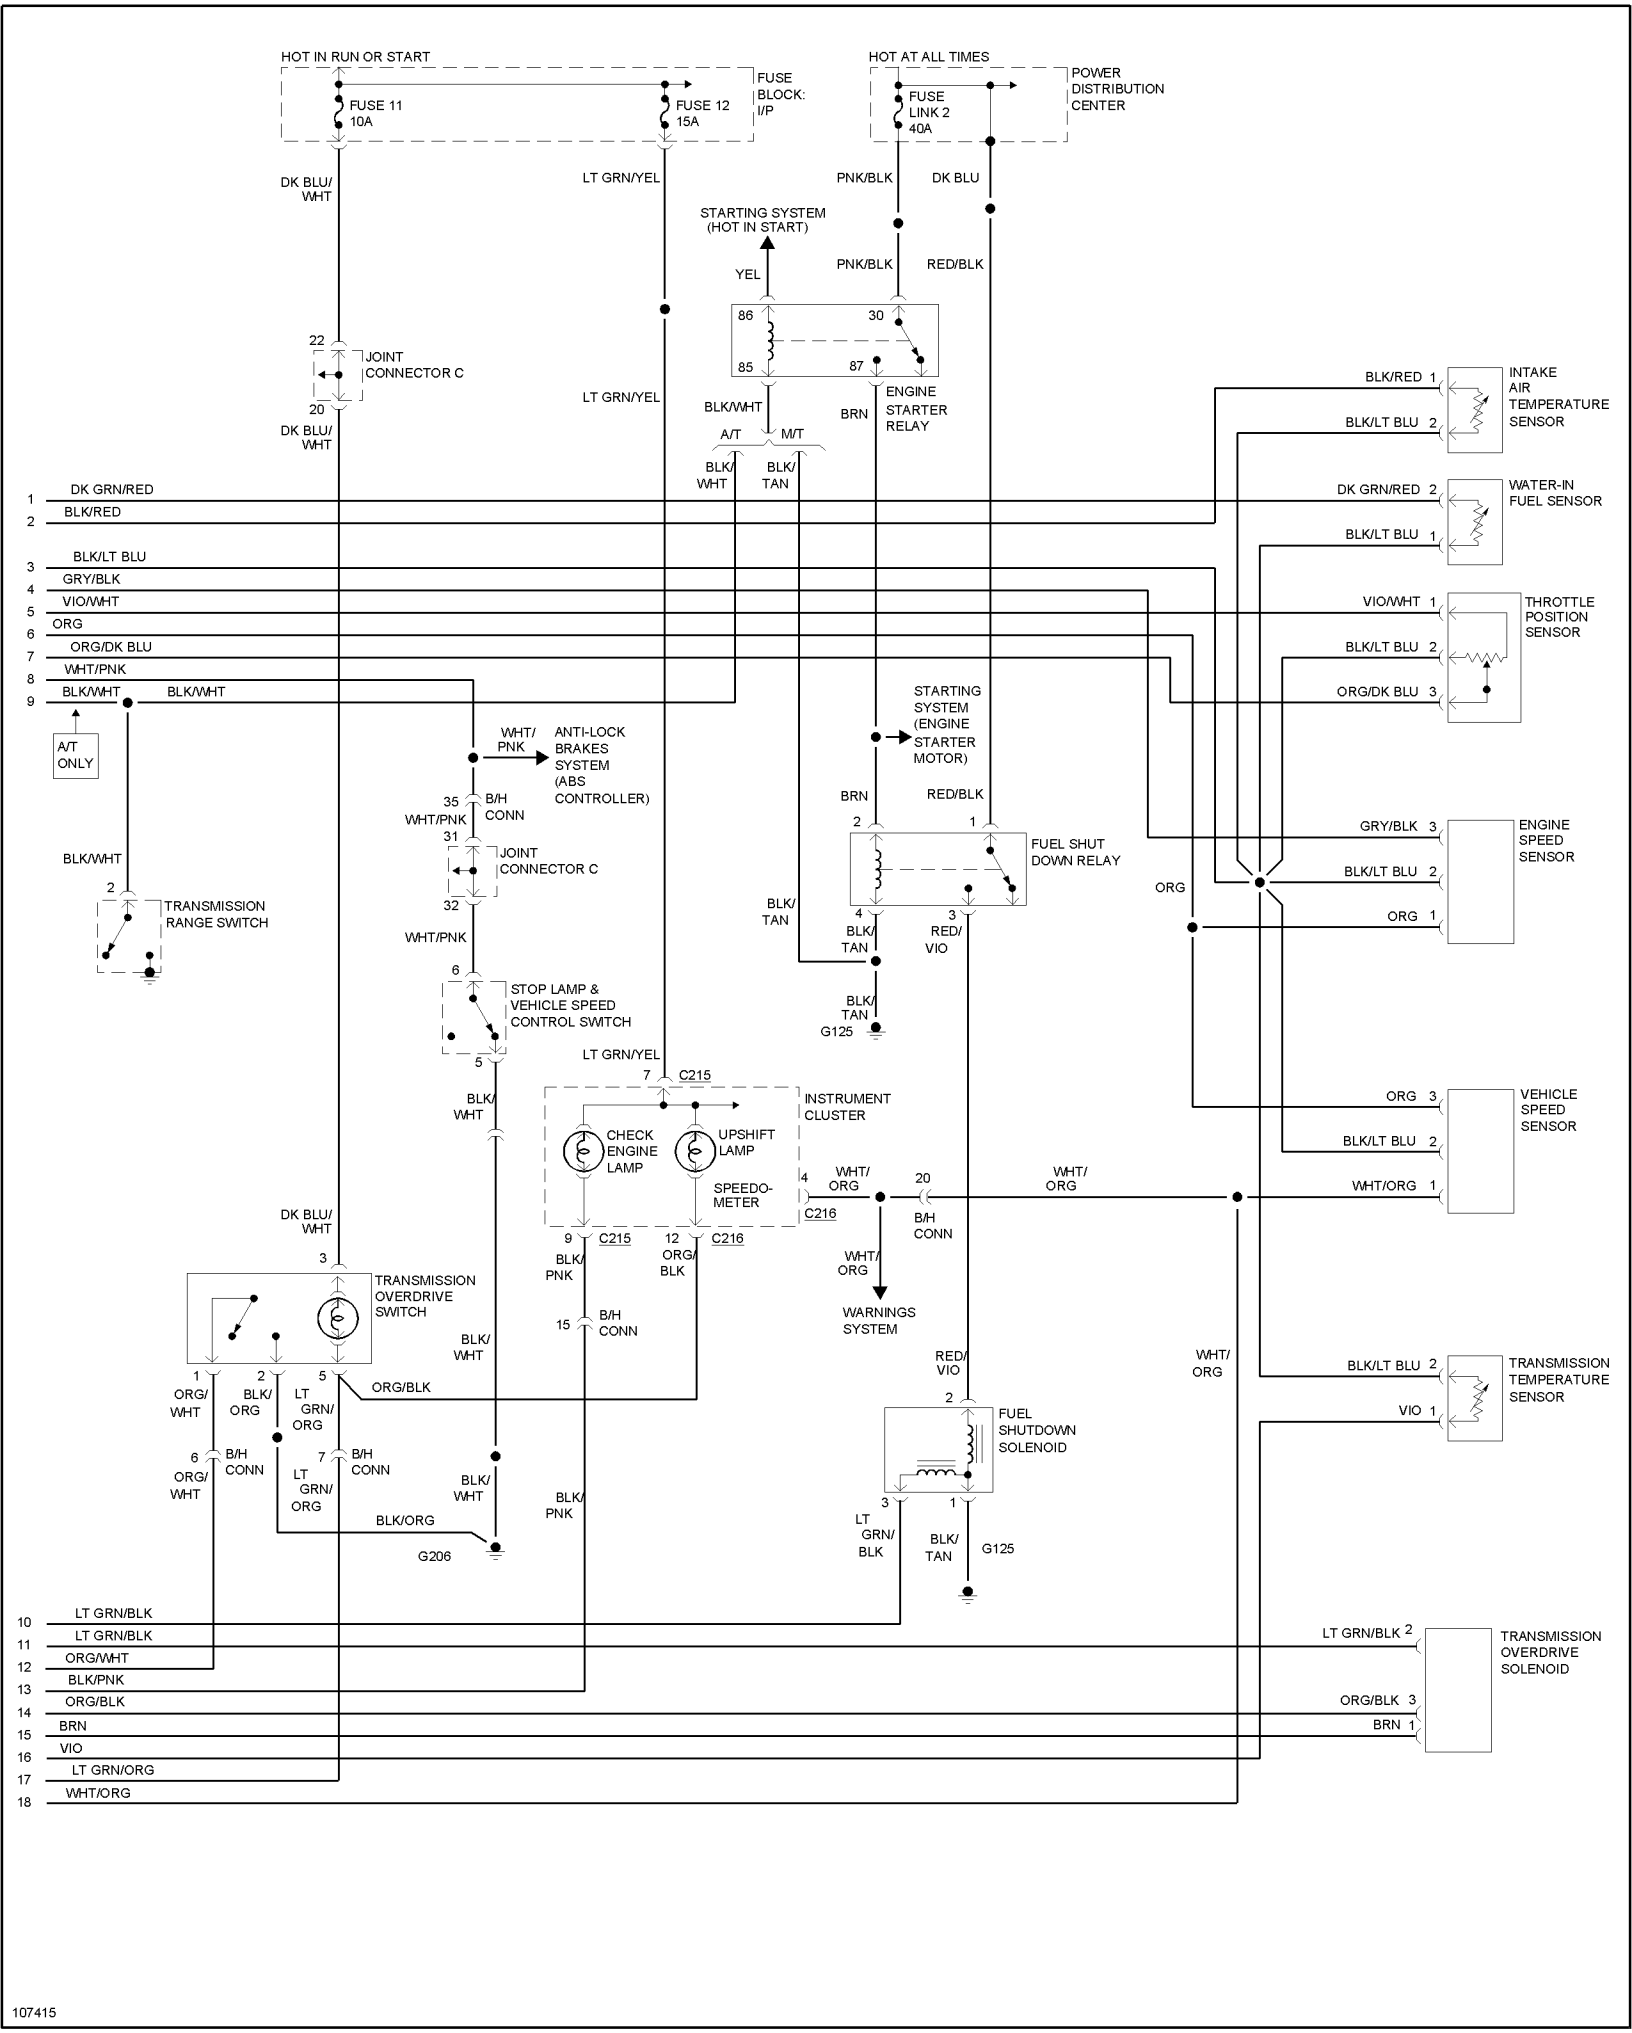
HOT IN RUN OR START
FUSE 11 10A
FUSE 12 15A
FUSE BLOCK: I/P
HOT AT ALL TIMES
FUSE LINK 2 40A
POWER DISTRIBUTION CENTER
DK BLU/ WHT
LT GRN/YEL
PNK/BLK
DK BLU
STARTING SYSTEM (HOT IN START)
YEL
PNK/BLK
RED/BLK
86
30
85
87
ENGINE STARTER RELAY
BRN
BLK/WHT
A/T
M/T
BLK/ WHT
BLK/ TAN
22
JOINT CONNECTOR C
20
DK BLU/ WHT
LT GRN/YEL
1 DK GRN/RED
2 BLK/RED
3 BLK/LT BLU
4 GRY/BLK
5 VIO/WHT
6 ORG
7 ORG/DK BLU
8 WHT/PNK
9 BLK/WHT
BLK/WHT
A/T ONLY
WHT/ PNK
ANTI-LOCK BRAKES SYSTEM (ABS CONTROLLER)
35
B/H CONN
WHT/PNK
31
JOINT CONNECTOR C
32
WHT/PNK
6
STOP LAMP & VEHICLE SPEED CONTROL SWITCH
5
STARTING SYSTEM (ENGINE STARTER MOTOR)
BRN
RED/BLK
2
1
FUEL SHUT DOWN RELAY
4
3
BLK/ TAN
RED/ VIO
BLK/ TAN
G125
BLK/WHT
2
TRANSMISSION RANGE SWITCH
LT GRN/YEL
7
C215
INSTRUMENT CLUSTER
BLK/ WHT
CHECK ENGINE LAMP
UPSHIFT LAMP
SPEEDO-METER
4
C216
WHT/ ORG
20
B/H CONN
WHT/ ORG
WHT/ ORG
9
C215
12
C216
BLK/ PNK
ORG/ BLK
15
B/H CONN
WARNINGS SYSTEM
DK BLU/ WHT
3
TRANSMISSION OVERDRIVE SWITCH
BLK/ WHT
1
ORG/ WHT
2
BLK/ ORG
5
LT GRN/ ORG
ORG/BLK
6
B/H CONN
ORG/ WHT
7
B/H CONN
LT GRN/ ORG
BLK/ WHT
BLK/ PNK
BLK/ORG
G206
RED/ VIO
2
FUEL SHUTDOWN SOLENOID
3
1
LT GRN/ BLK
BLK/ TAN
G125
WHT/ ORG
10 LT GRN/BLK
11 LT GRN/BLK
12 ORG/WHT
13 BLK/PNK
14 ORG/BLK
15 BRN
16 VIO
17 LT GRN/ORG
18 WHT/ORG
BLK/RED 1
INTAKE AIR TEMPERATURE SENSOR
BLK/LT BLU 2
DK GRN/RED 2
WATER-IN FUEL SENSOR
BLK/LT BLU 1
VIO/WHT 1
THROTTLE POSITION SENSOR
BLK/LT BLU 2
ORG/DK BLU 3
GRY/BLK 3
ENGINE SPEED SENSOR
BLK/LT BLU 2
ORG
ORG 1
ORG 3
VEHICLE SPEED SENSOR
BLK/LT BLU 2
WHT/ORG 1
BLK/LT BLU 2
TRANSMISSION TEMPERATURE SENSOR
VIO 1
LT GRN/BLK 2
TRANSMISSION OVERDRIVE SOLENOID
ORG/BLK 3
BRN 1
107415