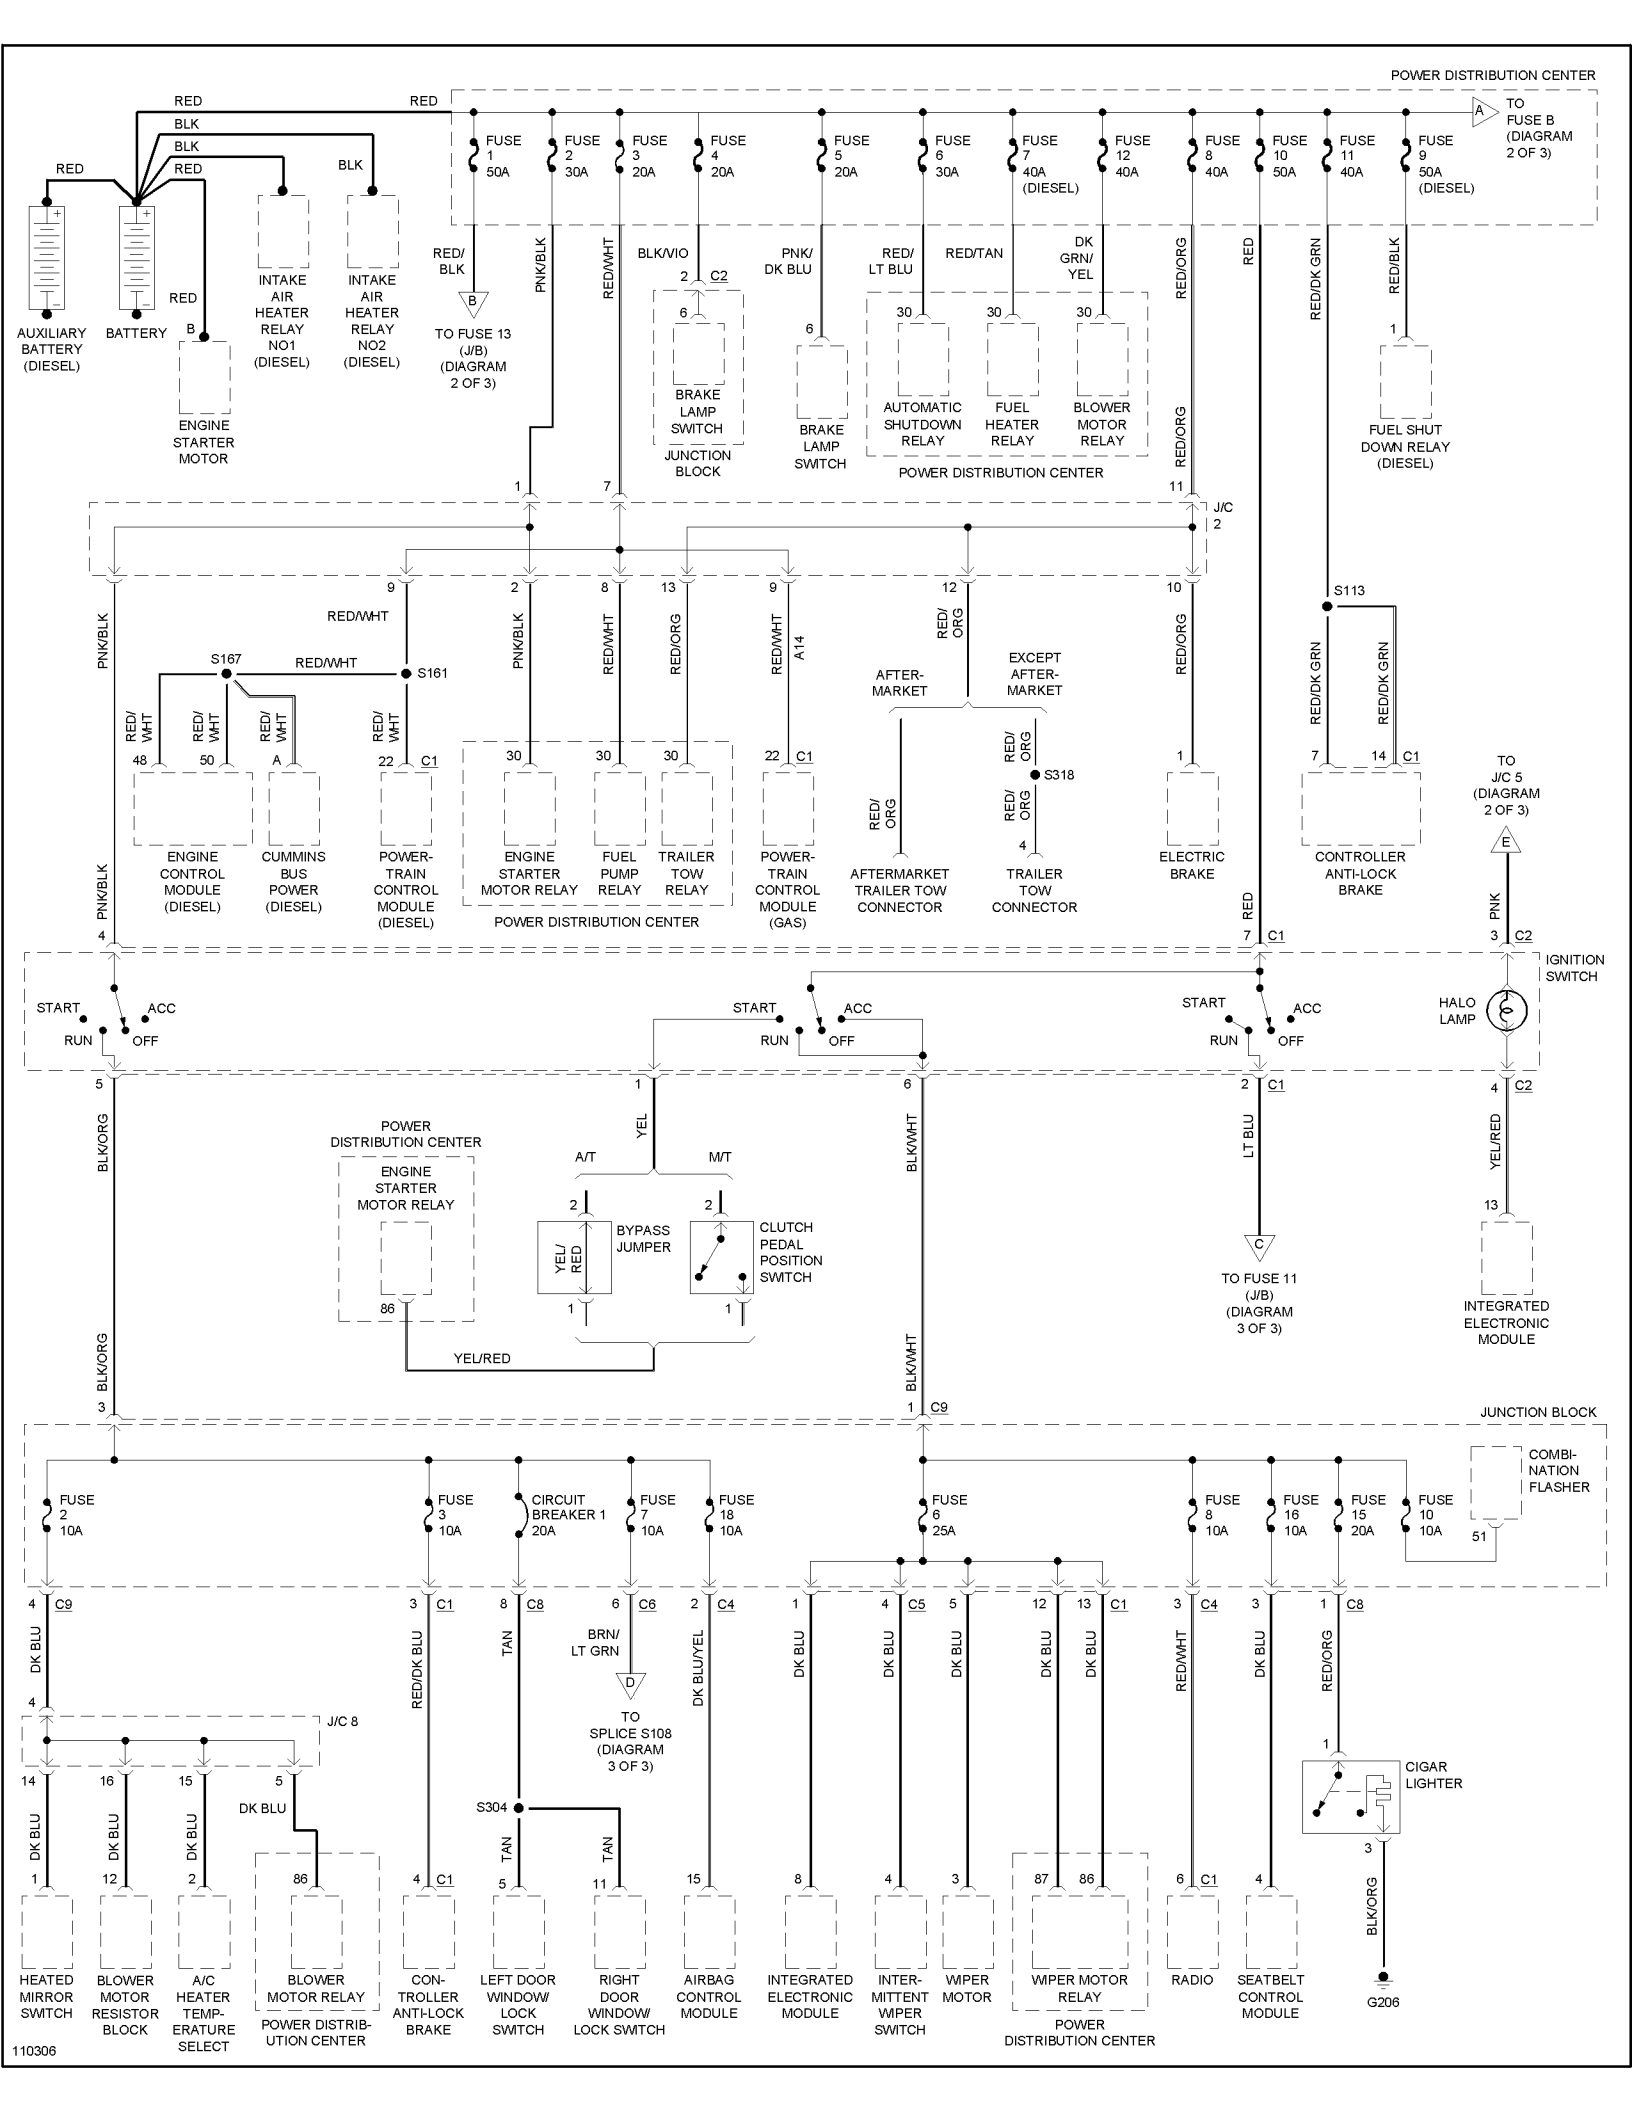
POWER DISTRIBUTION CENTER
TO FUSE B (DIAGRAM 2 OF 3)
FUSE 1 50A
FUSE 2 30A
FUSE 3 20A
FUSE 4 20A
FUSE 5 20A
FUSE 6 30A
FUSE 7 40A (DIESEL)
FUSE 12 40A
FUSE 8 40A
FUSE 10 50A
FUSE 11 40A
FUSE 9 50A (DIESEL)
AUXILIARY BATTERY (DIESEL)
BATTERY
ENGINE STARTER MOTOR
INTAKE AIR HEATER RELAY NO1 (DIESEL)
INTAKE AIR HEATER RELAY NO2 (DIESEL)
TO FUSE 13 (J/B) (DIAGRAM 2 OF 3)
BRAKE LAMP SWITCH
JUNCTION BLOCK
BRAKE LAMP SWITCH
AUTOMATIC SHUTDOWN RELAY
FUEL HEATER RELAY
BLOWER MOTOR RELAY
POWER DISTRIBUTION CENTER
FUEL SHUT DOWN RELAY (DIESEL)
J/C 2
S113
S167
S161
ENGINE CONTROL MODULE (DIESEL)
CUMMINS BUS POWER (DIESEL)
POWER-TRAIN CONTROL MODULE (DIESEL)
ENGINE STARTER MOTOR RELAY
FUEL PUMP RELAY
TRAILER TOW RELAY
POWER DISTRIBUTION CENTER
POWER-TRAIN CONTROL MODULE (GAS)
AFTER-MARKET
EXCEPT AFTER-MARKET
S318
AFTERMARKET TRAILER TOW CONNECTOR
TRAILER TOW CONNECTOR
ELECTRIC BRAKE
CONTROLLER ANTI-LOCK BRAKE
TO J/C 5 (DIAGRAM 2 OF 3)
IGNITION SWITCH
START
ACC
RUN
OFF
HALO LAMP
POWER DISTRIBUTION CENTER
ENGINE STARTER MOTOR RELAY
A/T
M/T
BYPASS JUMPER
CLUTCH PEDAL POSITION SWITCH
YEL/RED
TO FUSE 11 (J/B) (DIAGRAM 3 OF 3)
INTEGRATED ELECTRONIC MODULE
JUNCTION BLOCK
FUSE 2 10A
FUSE 3 10A
CIRCUIT BREAKER 1 20A
FUSE 7 10A
FUSE 18 10A
FUSE 6 25A
FUSE 8 10A
FUSE 16 10A
FUSE 15 20A
FUSE 10 10A
COMBI-NATION FLASHER
J/C 8
TO SPLICE S108 (DIAGRAM 3 OF 3)
S304
CIGAR LIGHTER
G206
HEATED MIRROR SWITCH
BLOWER MOTOR RESISTOR BLOCK
A/C HEATER TEMP-ERATURE SELECT
BLOWER MOTOR RELAY
POWER DISTRIB-UTION CENTER
CON-TROLLER ANTI-LOCK BRAKE
LEFT DOOR WINDOW/ LOCK SWITCH
RIGHT DOOR WINDOW/ LOCK SWITCH
AIRBAG CONTROL MODULE
INTEGRATED ELECTRONIC MODULE
INTER-MITTENT WIPER SWITCH
WIPER MOTOR
WIPER MOTOR RELAY
POWER DISTRIBUTION CENTER
RADIO
SEATBELT CONTROL MODULE
110306