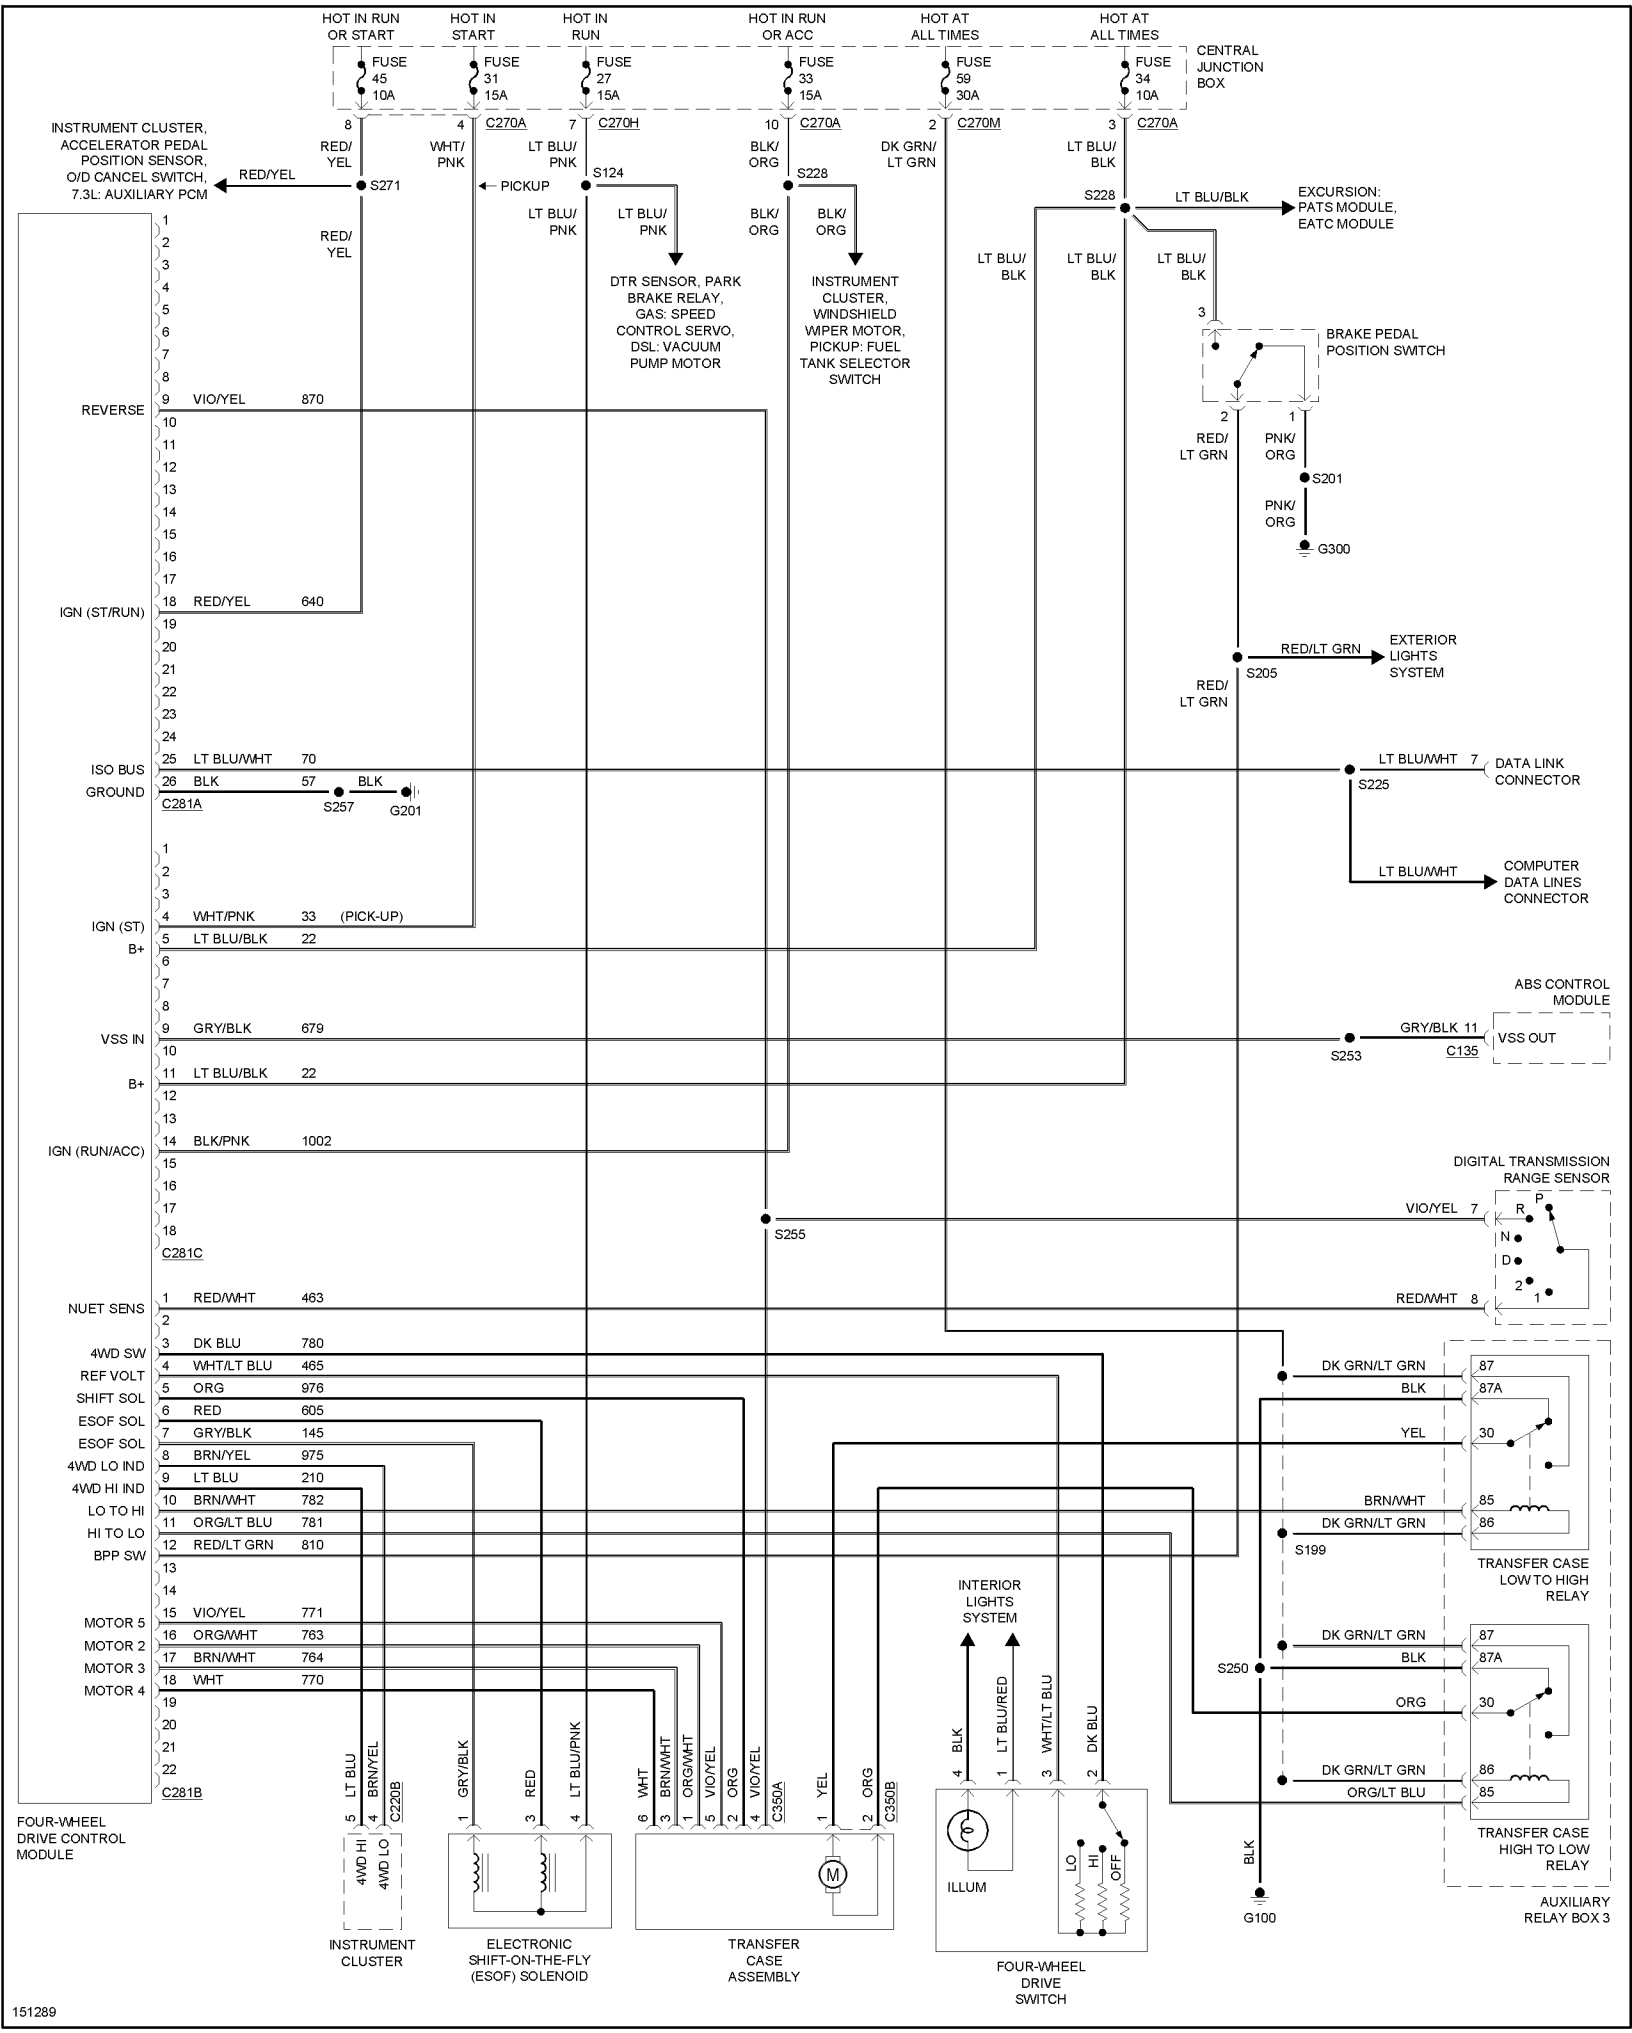
HOT IN RUN OR START
HOT IN START
HOT IN RUN
HOT IN RUN OR ACC
HOT AT ALL TIMES
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
FUSE 45 10A
FUSE 31 15A
FUSE 27 15A
FUSE 33 15A
FUSE 59 30A
FUSE 34 10A
INSTRUMENT CLUSTER, ACCELERATOR PEDAL POSITION SENSOR, O/D CANCEL SWITCH, 7.3L: AUXILIARY PCM
RED/YEL
S271
PICKUP
S124
S228
S228
LT BLU/BLK
EXCURSION: PATS MODULE, EATC MODULE
DTR SENSOR, PARK BRAKE RELAY, GAS: SPEED CONTROL SERVO, DSL: VACUUM PUMP MOTOR
INSTRUMENT CLUSTER, WINDSHIELD WIPER MOTOR, PICKUP: FUEL TANK SELECTOR SWITCH
BRAKE PEDAL POSITION SWITCH
RED/LT GRN
PNK/ORG
S201
G300
S205
RED/LT GRN
EXTERIOR LIGHTS SYSTEM
REVERSE
IGN (ST/RUN)
ISO BUS
GROUND
C281A
S257
G201
LT BLU/WHT 7
DATA LINK CONNECTOR
S225
COMPUTER DATA LINES CONNECTOR
IGN (ST)
B+
ABS CONTROL MODULE
VSS IN
S253
GRY/BLK 11
VSS OUT
C135
B+
IGN (RUN/ACC)
DIGITAL TRANSMISSION RANGE SENSOR
S255
VIO/YEL 7
C281C
NUET SENS
RED/WHT 8
4WD SW
REF VOLT
SHIFT SOL
ESOF SOL
ESOF SOL
4WD LO IND
4WD HI IND
LO TO HI
HI TO LO
BPP SW
DK GRN/LT GRN
BLK
YEL
BRN/WHT
DK GRN/LT GRN
S199
TRANSFER CASE LOW TO HIGH RELAY
MOTOR 5
MOTOR 2
MOTOR 3
MOTOR 4
INTERIOR LIGHTS SYSTEM
S250
DK GRN/LT GRN
BLK
ORG
DK GRN/LT GRN
ORG/LT BLU
TRANSFER CASE HIGH TO LOW RELAY
BLK
G100
AUXILIARY RELAY BOX 3
ILLUM
LO
HI
OFF
FOUR-WHEEL DRIVE SWITCH
INSTRUMENT CLUSTER
ELECTRONIC SHIFT-ON-THE-FLY (ESOF) SOLENOID
TRANSFER CASE ASSEMBLY
FOUR-WHEEL DRIVE CONTROL MODULE
C220B
C350A
C350B
C281B
151289